

OPERATING INSTRUCTIONS FOR DUAL HEIGHT FOLDING WHEELING STAGE


Failure to heed these instructions, may cause the stage unit to fall over resulting in serious personal injury.

1 MOVING THE STAGE UNIT



Wheel only from swivel castors end of unit.

Do not attempt to wheel from non swivel castors end of unit.

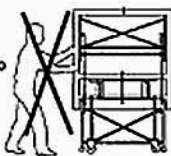

Stage units are designed to be operated by one person, however if you require assistance with lifting and lowering please ask someone. Make sure both people operate the unit together from the same side.

2 UNFOLDING THE STAGE UNIT FOR USE




Release safety hook on top edge of unit.



Standing at centre of unit, pull out leg to unlock before folding unit.




Pull smoothly towards you to start the unfolding action. Do not push or pull whilst unfolding unit.

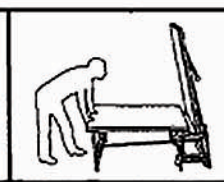


Lower first half of unit to floor.



Do not push or pull with unit half open.

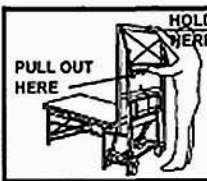

Repeat operation for second half of unit. Begin by pulling out leg to unlock.

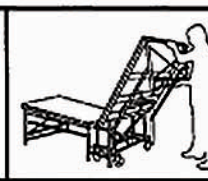


Lower smoothly to floor.




Unit is now fully open, and can be safely moved.


3 FOLDING THE STAGE UNIT FOR STORAGE

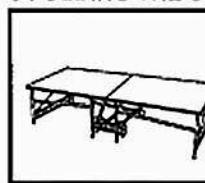

Folding unit for storage is the reverse of step 2.

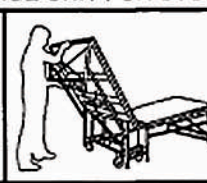


Standing at centre of unit, lift either half smoothly to fold.

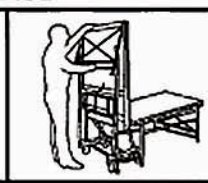

Continue folding until half of unit is past centre. Push leg home to lock.




Do not pull or push with unit half folded.

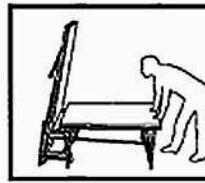

Now stand at centre of other half of unit.



Lift smoothly to repeat folding action. Do not pull or push whilst folding unit.

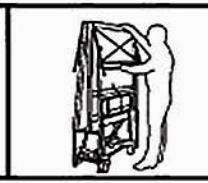


Continue folding until half of unit is past centre. Push leg home to lock.




Reset safety hook. Unit is now fully folded and can be safely moved.


A. ADJUSTING STAGE UNIT TO NEXT HEIGHT

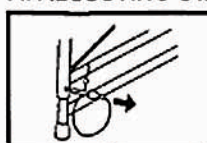

Pull out pins from end legs

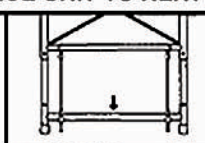


Pull out telescoping legs to next height.

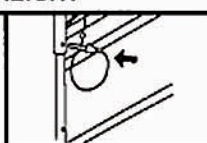


Replace pins in end legs


Repeat this step on opposite side of unit.

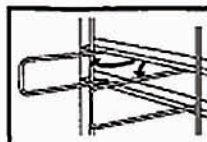

centre legs.

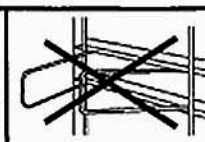

Make sure the legs are completely unfolded.

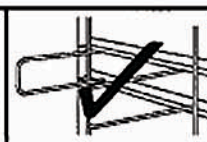


Repeat this step on opposite side of unit.

B. UNFOLDING EXTENDED HEIGHT STAGE UNIT FOR USE




Release safety hook on top edge of unit.

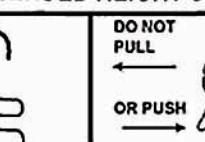


DO NOT PULL OR PUSH
Standing at centre of unit lower either half until centre legs touch floor. Do not push or pull whilst unfolding unit.




Now lower other half of unit until centre legs touch floor.

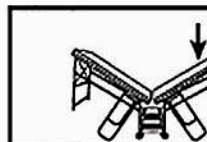

Push downward on end of stage unit until unit snaps into open position with all legs solidly on floor.

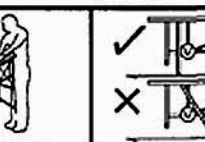

Make sure that centre legs are vertical to floor.

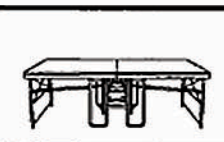


Unit is now fully open, and can be safely moved.


C. FOLDING EXTENDED HEIGHT STAGE UNIT FOR STORAGE



Standing at centre, lift either end until it is almost vertical. Do not let go of unit.

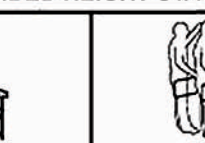

While holding end of unit in up position, grasp centre leg and pull smoothly towards yourself. Two people are required for this operation.

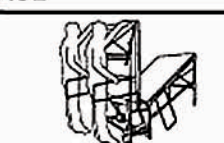

Continue pulling smoothly until the folding action sets all four castors on the floor, and the end you are lifting can be raised to past centre position. Two people are required for this operation.



Push leg home to lock. Fold centre legs



Standing at centre of opposite half, lift smoothly to fold this half beyond the centre. Push leg home to lock. Fold centre legs



Reset safety hook. Unit is now fully folded and can be safely moved.